


# INSTALLATION INSTRUCTION

## CANOPY OF FIXTURE PROVIDED WITH KEY HOLES AND GLASS SHADE WITH A CENTRAL MOUNTING HOLE.

1. Place lockwashers onto mounting screws. Thread mounting screws into mounting holes in cross bar by about 2 full turns (to be tightened later).
2. Fasten cross bar onto outlet box using 2 outlet box screws, with heads of mounting screws facing downward.
3. Fasten threaded rod to canopy: a) Insert threaded rod into central hole of canopy with locknut. b) Slip a lockwasher and terminal ring of ground wire onto threaded rod from the back of canopy and then secure with a locknut.
4. **Electrical Connections:** a) Make sure that electricity has been shut off. b) Connect the white wire(s) from fixture to the white wire of supply circuit, Connect the black wire(s) from fixture to the black wire of supply circuit. Use wire connectors provided to do the connections. No loose strands or loose wires should be present. Secure wire connectors with U.L. Listed electrical tape.  
To make ground connection, bring together the ground wire of supply circuit and the ground wire from fixture and fasten them securely to the cross bar with the green screw.
5. Place canopy over outlet box. Let heads of mounting screws and lockwashers come out through the large ends of key holes.
6. Twist canopy until heads of mounting screws and lockwashers are at the narrow ends of key holes. Tighten screws to secure canopy.
7. Install bulb(s) (not provided). Mount glass over threaded rod, using cap and finial.

**CAUTION:** Refer to the relamping marking located near the lampholder or on packing box for recommended maximum wattage-do not exceed recommended wattage.

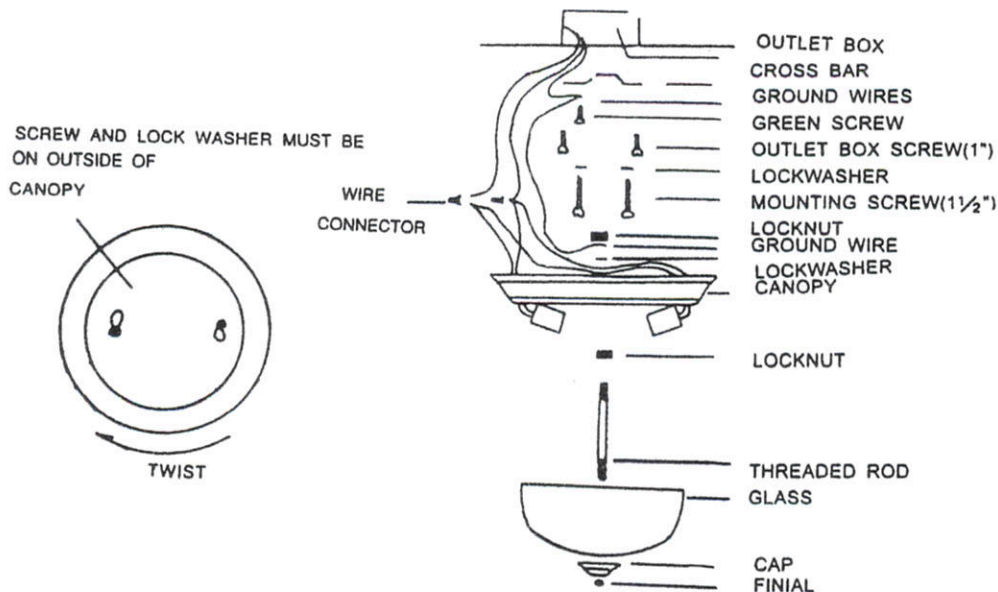

ITEM NO.: 529SN/503284

